

# Quickstart Guide

## PageFlip Firefly Bluetooth Pedal



www.pageflip.com

## Overview



Insert two AA batteries into **pedal**.

## Step 1 - Powering Pedal



1. Insert 2 AA batteries in the battery compartment.
2. Slide the **POWER** switch to the *ON* position.

**If the Pedal has not been paired to a Bluetooth® device:**

- see 2A or 2B for pairing instructions.

**If the Pedal has been paired, the current mode light will:**

- flash quickly while trying to reconnect.
- flash slowly when connected.

## Step 2A - Pairing Pedal to a Bluetooth® enabled device

1. Press the **BLUETOOTH RESET** button - lights will flash sequentially.
2. In Bluetooth® settings, select “Premium Pedal”. (Windows computer: Right-click the Bluetooth icon on the taskbar and select “Add Device”).
3. Single light will flash slowly when connected.



## Step 2B - Pairing Pedal to a computer without Bluetooth® (using dongle)

1. Purchase optional Bluetooth® dongle from [www.pageflip.com](http://www.pageflip.com)
2. Insert the Bluetooth® dongle into a USB port.
3. Press **BLUETOOTH RESET** button – lights will flash sequentially.
4. Enable Bluetooth® on computer to be paired.
5. In the list of Bluetooth® devices on the computer, select “Premium Pedal”.

Single light will flash slowly on Pedal when connected.



Bluetooth Reset Button

## Step 3 - Select a Mode

1. Press a **MODE** button to select which keyboard or mouse commands to emulate – light will flash the selected mode.



Mode	Description
Pg Up/Dn	Page Up / Page Down
← →	Left / Right Arrow
↑ ↓	Up / Down Arrow
⏏ ⏏	Click Left / Right (Mouse)
␣ ↵	Space / Enter


## Advanced Features and Care

### Sleep Mode

The Pedal will enter sleep mode after 30 minutes of inactivity – lights will turn off. Press a switch to resume normal operation (in a few seconds) – current mode light will flash slowly.

### External Switch Jacks

The Pedal will allow your choice of external switches as an alternative to the built-in switches. See [PageFlip](http://PageFlip.com) website for many switch options.

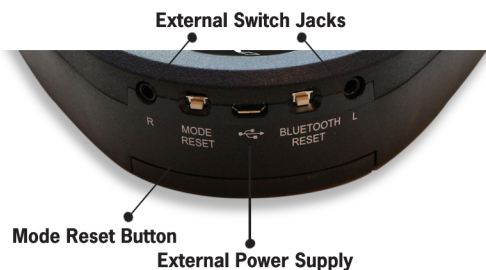

Mode Reset Button

External Power Supply

### External Power Supply

Plug the USB cable into a USB AC adapter, such as those included with iPhone/iPad.

### Low Battery

Light will quickly flash three times to indicate the batteries are getting low and should be replaced soon.

### Auto Repeat Function

Slide the **REPEAT** switch to *ON* and Pedal will emulate pressing and holding a keyboard or mouse button.

### Programmable Modes

- Download and execute Windows/Mac software from [www.pageflip.com](http://www.pageflip.com)
- Press **MODE RESET** button to restore modes to factory settings

## Warranty and Contact Information

### Warranty

PageFlip manufactured products include a one year limited warranty. This warranty is against defects in materials and manufacturing for one year from the date of purchase. Warranty in full text is available at [www.pageflip.com](http://www.pageflip.com)

### More Information

You can find warranty, guarantee and return/repair information online.

For more information on PageFlip products and services, or for contact:

**PageFlip, Inc.**  
Woodmere, NY 11598  
USA  
[www.pageflip.com](http://www.pageflip.com)



[www.pageflip.com](http://www.pageflip.com)